


LOADING METHOD FOR TOMATO PASTE (48 BINS) IN 50' BOXCARS

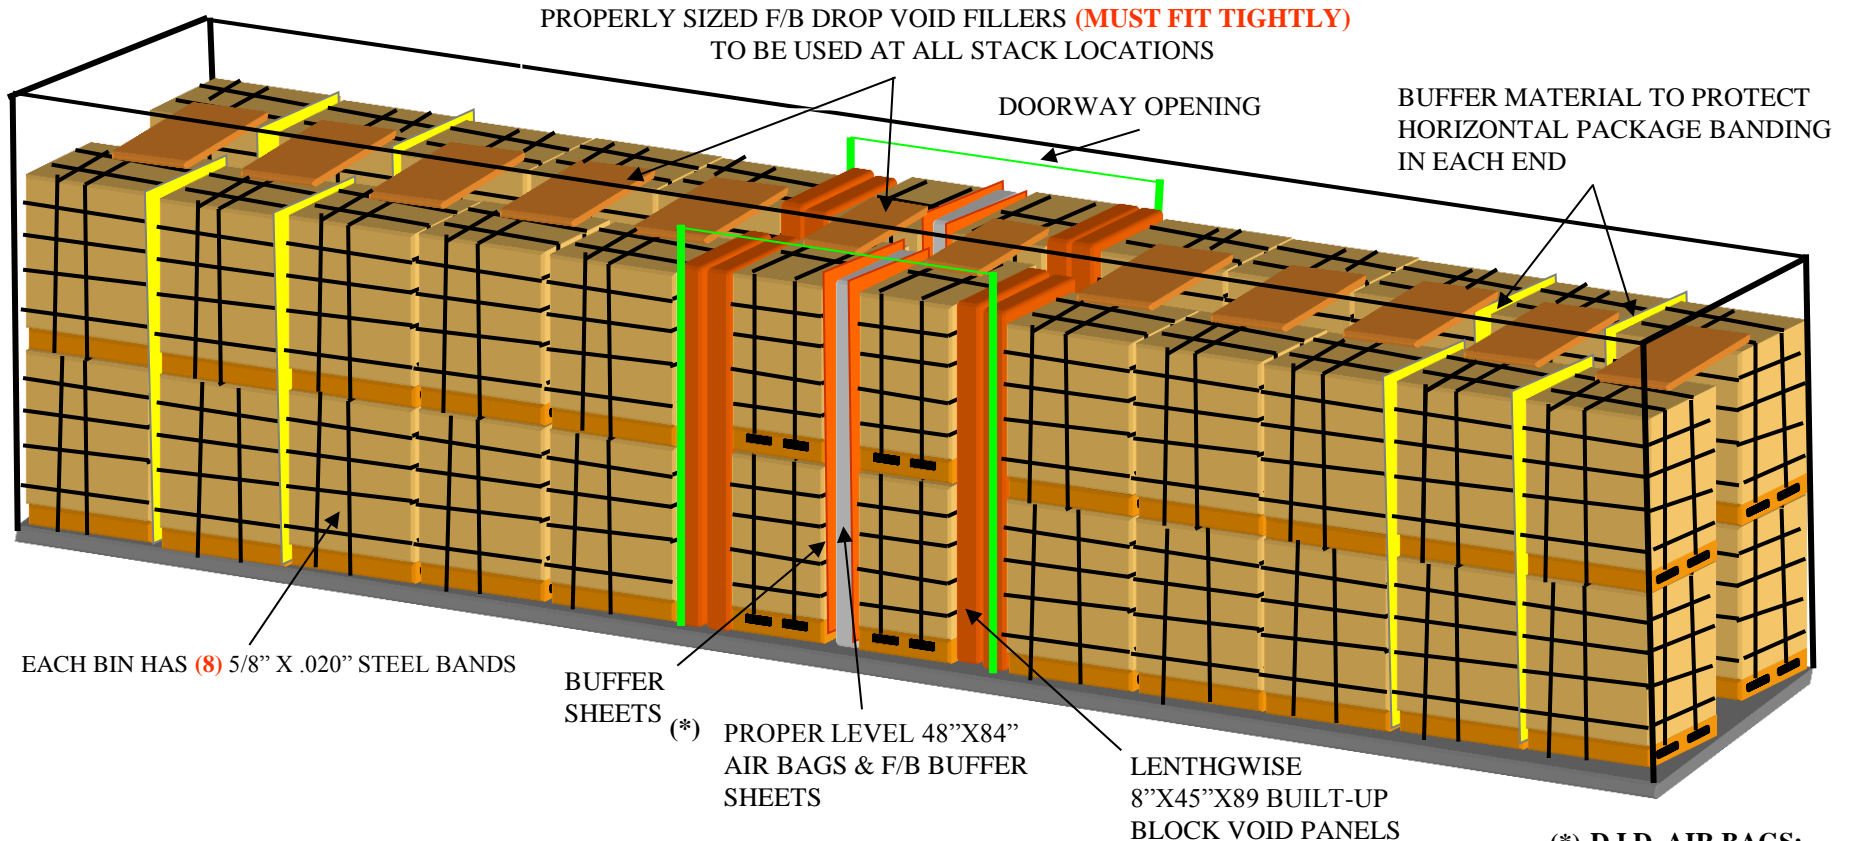

(*) **D.I.D. AIR BAGS:**
LEVEL 3 MAX LD 160M
LEVEL 4 MAX LD 205M

1. FIRST INSPECT END WALLS, IF SERIOUSLY BOWED REJECT CAR, OR USE 2X4 LBR./DUNNAGE TO TRUE UP END WALLS. OTHERWISE STACKS 1-3 COULD BECOME ASKEW IF MORE THAN 2 1/4" THIS IS ENOUGH TO COMPROMISE BIN STRAPS.
2. LOAD LONG SIDE BINS STRAIGHT LINE TIGHTLY TO END WALL (5) STACKS TWO ROWS TWO HIGH & TO EACH SIDE WALL.
3. CRITICAL TO USE SUITABLE BUFFER MATERIAL STACKS 1-3 TO PREVENT DAMAGE TO HORIZONTAL PACKG. BANDS.
4. CENTER CHANNEL VOID FILLERS AS SHOWN MUST FIT TIGHTLY & FULLY BRACE TOP LAYER & MIN. 30% BOTTOM BIN.